


Instructions for new starter motor

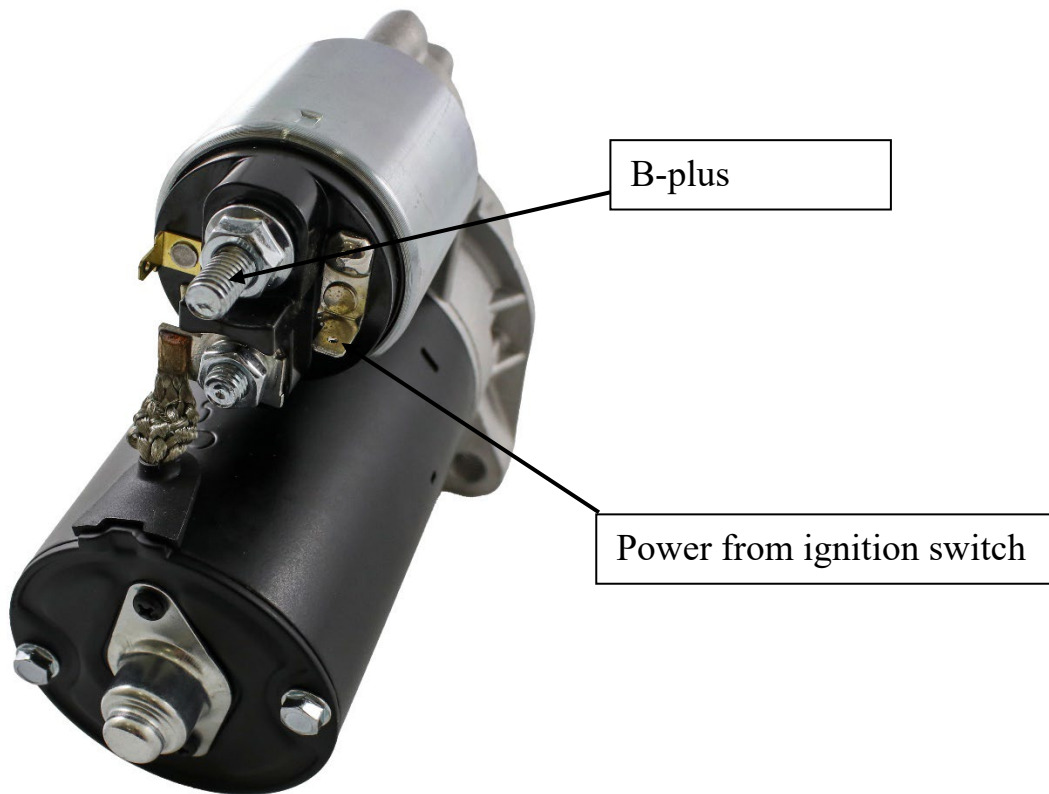

The new starter motor is threaded into the stock, which means no nuts are needed. Two M12x90 mm long bolts included.

To get the upper fixing screw in place, you have to release the rear gearbox bracket and lower the rear edge a little.