


PROP ROD IN STORED POSITION

Drill two 1/8" holes for retaining clip. Install with phillips screw provided. **NOTE: USE CAUTION WHEN DRILLING TOWARD THE OUTER DECKLID SURFACE**

Drill 1/4" hole in vertical inner deck lid stamping, approximately 12" from RH outer deck lid edge. Insert rod and rod shown.

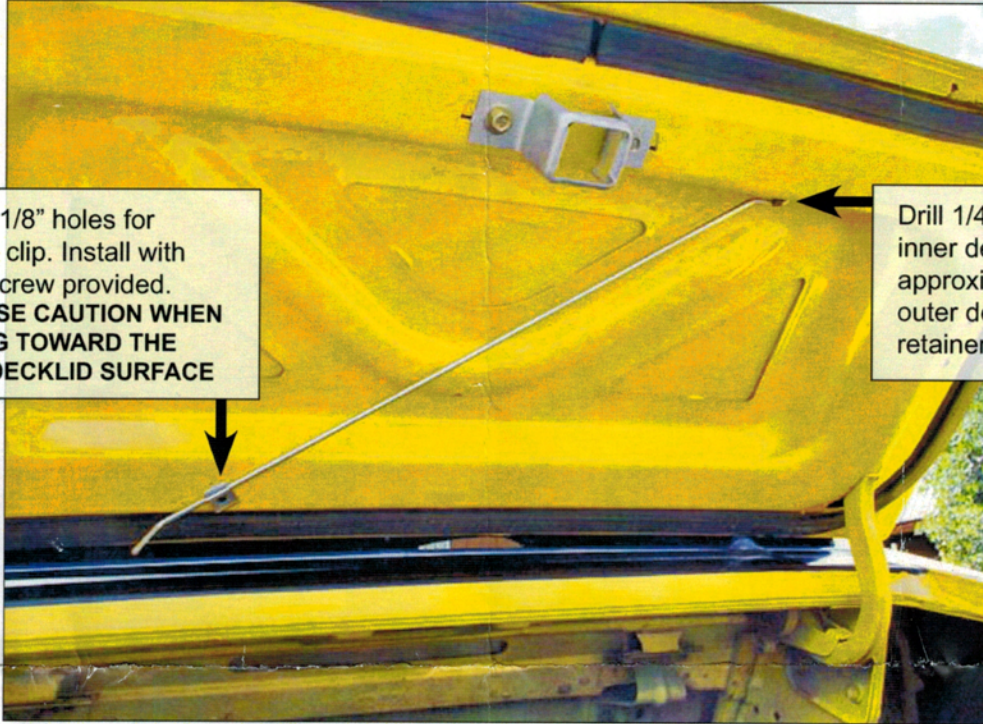

PROP ROD IN OPEN POSITION

Drill 1/4" hole in RH fender extension as shown (approximately 2.5" down from peak)

2.5"

